


80–240 Removal and installation of vacuum element for trunk lid

Color code of vacuum lines for central interlock


Vacuum line	color code
Interlocking line (25)	yellow-red
Unlocking line (26)	yellow-green

Removal


- 1 Remove cover left of rear center piece (29).

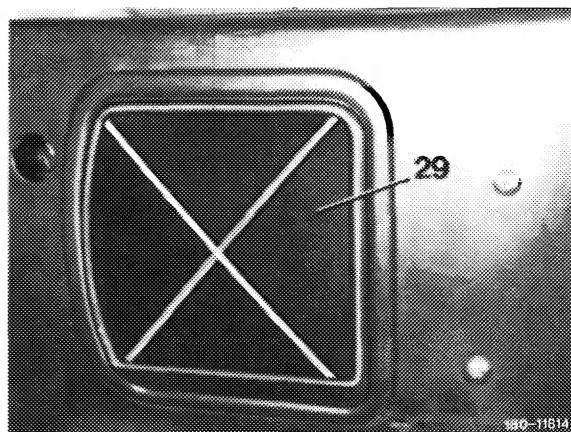

- 2 Unscrew oval head screws (30) for vacuum element.
- 3 Force control rod out of connecting plate (33).

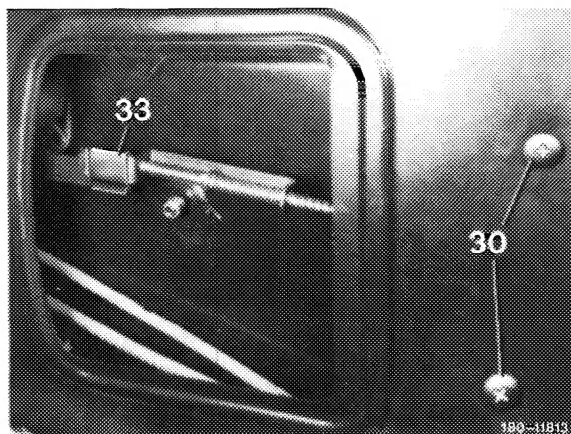

4 Pull out vacuum element (5) and pull connections (17) with interlocking line (25) and unlocking line (26) from vacuum element.

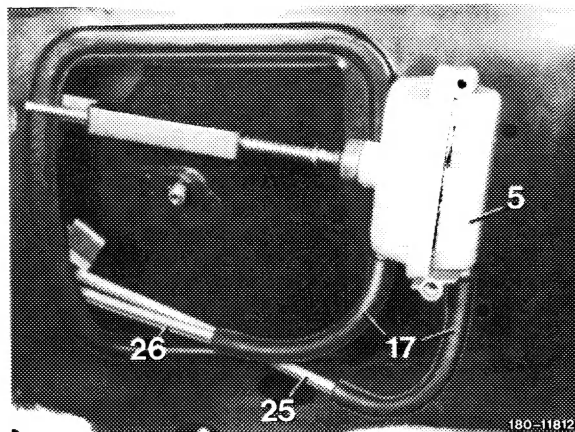

Installation

5 For installation proceed vice versa.